
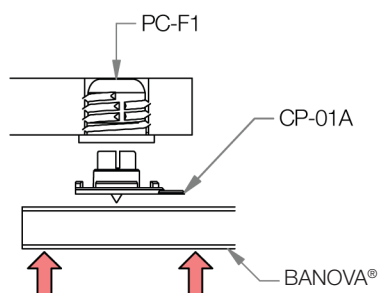



Standard Range Clips BANOVA® Plywood Panels

	<p>USE WITH:</p> <p>PC-M1A PC-M2H PC-VM1</p> <p>PC-SM2 PC-SM2H</p>	<p>INSTALL WITH:</p> <p>CP-01A CT-07 CT-09 CT-10</p> <p>or CP01ST</p>
<p>INSTALLATION STEPS (see PC-F1 installation guide for fitting PC-F1)</p>		


- 1** Fit CP-01A into PC-F1 then push panel to mark center



- 2** Drill panel on center mark with 9mm drill 7.5mm deep

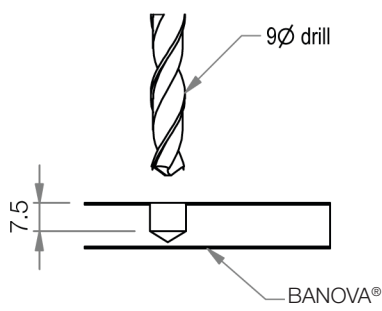


- 3** Screw fit male clip with CT-10

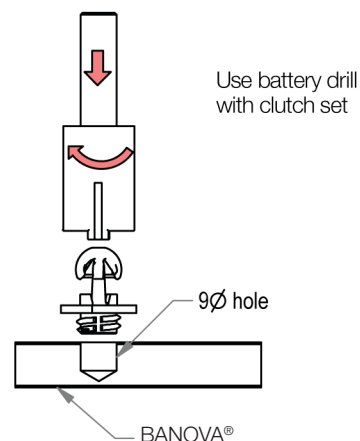


INSTALLING ADHESIVE FIT MALE CLIPS

- 4** Clip PC-SM2 into PC-F1

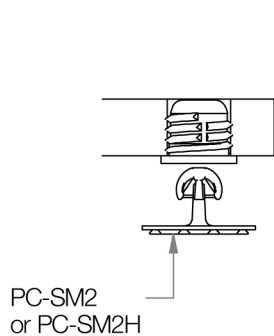

- 5** Apply adhesive to PC-SM2

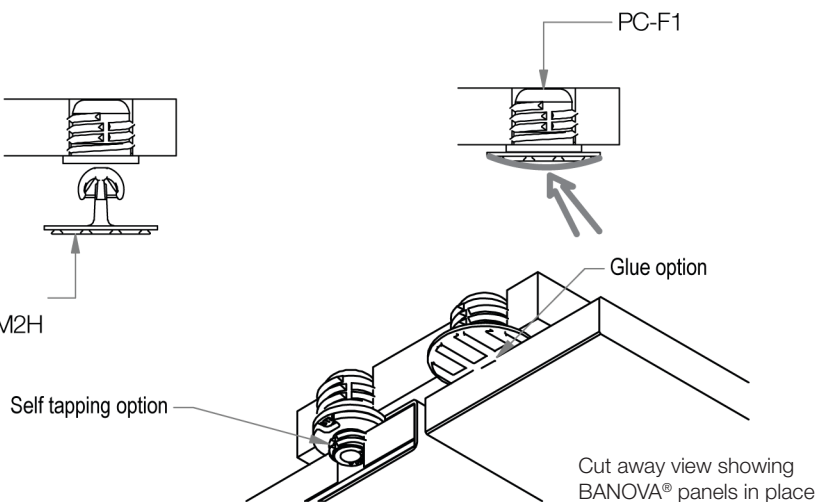

- 6** Place panel & support while adhesive dries

